


BEFORE YOU START...

The Keep-it-Kleen In-Line A/C Filter is assembled and ready for installation. BEFORE INSTALLING, remove the rear nut. Install the main body o-ring into the proper groove, and LUBRICATE O-RING. Reassemble NUT to FILTER BODY. Secure FILTER BODY in a bench vise and tighten REAR NUT. You're ready to install the filter.

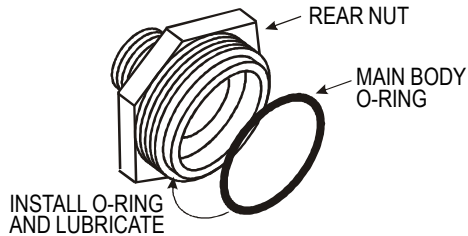


FOR LEAK FREE INSTALLATION...


Use the template provided (on the left) to determine the best location for the Keep-it-Kleen In-Line A/C Filter and to mark the tube for cutting. Once cut, be sure the tube end is free of all burrs.

STEP 1: Place the FEMALE NUT onto the tube end, then place the BRASS COMPRESSION FERRULE onto the tube with the SMALL END TOWARDS THE NUT. Do not install o-ring at this time.

STEP 2: For proper spacing, place the tube end into the filter, bottoming the tube out. Tighten the nut to 10-12 FT-LB. Disassemble. Lubricate the o-ring (provided) and install onto the tube. Reassemble and tighten to 10-12 FT.LB. Repeat steps 1 and 2 on opposite end of filter.

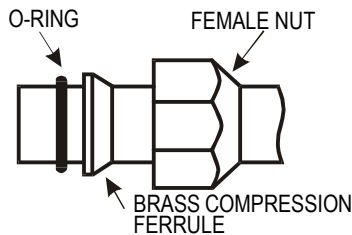

BE SURE TO INSTALL BRASS FERRULE AS PICTURED WITH SMALL END TOWARDS NUT

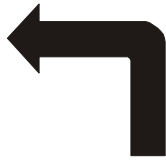

**CUT
HERE**



FOR LEAK FREE INSTALLATION YOU SHOULD HAVE STRAIGHT TUBE BETWEEN THESE TWO POINTS.

INSTALLATION TEMPLATE

Mobilair 1-800-538-6057
Div. of J.L. Sales & Marketing, Inc. **2000** keep-it-kool.com